

WIND FILM ADVANCE

 
SHUTTER  
BUTTON

EXPOSURES  
REMAINING

READY  
LIGHT

FLASH  
BUTTON

FLASH PICTURE:



Press flash button until  
flash ready light blinks.

WITH FLASH:



WITHOUT FLASH:  
3 ft. minimum, keep  
sun to your back.

FILM ADVANCE  
WIND SLOWLY

